

RC802-30B, RC802-30B-BL

RC804-30B, RC804-30B-BL


RC806-30B, RC806-30B-BL

Single E1 link

Modular Optical Multiplexer

User Manual

(Rev. M)

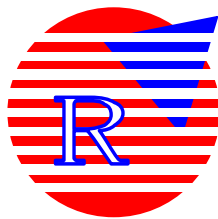

Beijing Raisecom Science & Technology Co., Ltd.

CONTENT

CHAPTER 1. INTRODUCTION	1
1.1 MAIN FEATURES	1
1.2 PRODUCT ARTICLE DESCRIPTION	1
CHAPTER 2. PRODUCT SPECIFICATIONS.....	3
2.1 E1 INTERFACE SPECIFICATION	3
2.2 OPTICAL FIBER INTERFACE SPECIFICATION	3
2.3 POWER SUPPLY	3
2.4 AMBIENCE.....	3
CHAPTER 3. DEFINITION OF INDICATORS	4
3.1 DESCRIPTION OF THE FRONT PANEL.....	4
3.1.1 <i>Power Supply Indicator</i>	4
3.1.2 <i>Alarm Indicators</i>	4
3.1.3 <i>E1 Interface</i>	5
3.1.4 <i>Optical Interface</i>	5
3.2 DIP-SWITCH SETUP.....	5
3.2.1 <i>Dip-switch SW2 Setup</i>	5
3.2.2 <i>E1 Interface Impedance Setup (SW1)</i>	7
3.2.3 <i>Manufactory setup (SW3)</i>	7
CHAPTER 4. INSTALLATION AND TEST	8
4.1 INSPECTING THE PRODUCT	8
4.2 PREPARATION BEFORE INSTALLATION	8
4.3 INSTALLATION.....	8
4.3.1 <i>Connecting Data Interfaces</i>	8
4.3.2 <i>Applying Power Supply</i>	8
4.3.3 <i>Configuration with Buttons and Dip-switches</i>	9
CHAPTER 5. TROUBLESHOOTING.....	10
APPENDIX A. INTRODUCTION OF CABLE MAKING.....	11



Chapter 1. Introduction

RC800-30B series optical modular multiplexers are ideal equipments to transmit single-channel E1 signals over optical fiber. It can be inserted into Raisecom's chassis which can also accommodate other Raisecom series products to enable uniform network management. RC800-30B series are compact in size and highly integrated with versatile capabilities. RC800-30B also can be inserted into Raisecom's single slot chassis to be flexibly deployed at the remote site.

The RC800-30B series optical multiplexers are ideal for point-to-point, medium-sized and small capacity networks, such as wireless communication base stations, dedicated communication networks and switching networks. The transmission capacity of RC800-30B series is single channel E1 (equivalent to 30 voice channels).

1.1 Main Features

- RC800-30B series optical multiplexers adopt extra large-scale ASIC chips with low power consumption. Four-level PCB circuit board ensures high reliability.
- RC800-30B provides complete alarm indications. The local and remote alarms can be displayed simultaneously.
- RC800-30B supports loop-back function for E1 channel. It is convenient for deployment, operation and maintenance.
- RC800-30B is also featured by modularization design with high security, stability, reliability, and easy to use. Power supply is provided from the chassis backplane.

1.2 Product Article Description

Article	Description
RC802-30B-S1	Module at central office/customer premise, two CC3 interfaces (75 Ω , unbalanced), one optical port, dual-fiber single mode (DSC), 0-25Km
RC802-30B-BL-S1	Module at central office/customer premise, one RJ45 interface (120 Ω , balanced), one optical port, dual-fiber single mode(DSC), 0-25Km
RC802-30B-S2	Module at central office/customer premise, two CC3 interfaces (75 Ω , unbalanced), one optical port, dual-fiber single mode(DSC), 10-60Km
RC802-30B-BL-S2	Module at central office/customer premise, one RJ45 interface (120 Ω , balanced), one optical port, dual-fiber single mode(DSC), 10-60Km
RC802-30B-S3	Module at central office/customer premise, two CC3 interfaces (75 Ω , unbalanced), one optical port, dual-fiber single mode(DSC), 15-120Km
RC802-30B-BL-S3	Module at central office/customer premise, one RJ45 interface (120 Ω , balanced), one optical port, dual-fiber single mode(DSC), 15-120Km
RC804-30B-S1	Central office module, two CC3 interfaces (75 Ω , unbalanced), one optical port, single fiber single mode 1310 (SC-PC), dual-wavelength, 0-25Km
RC804-30B-BL-S1	Central office module, one RJ45 interface (120 Ω , balanced), one optical port, single fiber single mode 1310(SC-PC), dual-wavelength, 0-25Km



RC804-30B-S2	Central office module, two CC3 interface(75 Ω , unbalanced), one optical port, single fiber single mode 1310(SC-APC), dual-wavelength, 10-60Km
RC804-30B-BL-S2	Central office module, one RJ45 interface (120 Ω , balanced), one optical port, single fiber single mode 1310 (SC-APC), dual-wavelength, 10-60Km
RC806-30B-S1	Customer premises module, two CC3 interfaces (75 Ω , unbalanced), one optical port, single fiber single mode 1550 (SC-PC), dual-wavelength, 0-25Km
RC806-30B-BL-S1	Customer premises module, one RJ45 interface (120 Ω , balanced), one optical port, single fiber single mode 1550 (SC-PC), dual-wavelength, 0-25Km
RC806-30B-S2	Customer premises module, two CC3 interfaces (75 Ω , unbalanced), one optical port, single fiber single mode 1550 (SC-APC), dual-wavelength, 10-60Km
RC806-30B-BL-S2	Customer premises module, one RJ45 interface (120 Ω , balanced), one optical port, single fiber single mode 1550 (SC-APC), dual-wavelength, 10-60Km

The following products can work in pairs:

Central office module	Customer premises module
RC802-30B(-BL)-S1	RC802-30B(-BL)-S1
	RC801-30B-FV35-S1
RC802-30B(-BL)-S2	RC802-30B(-BL)-S2
	RC801-30B-FV35-S2
RC802-30B(-BL)-S3	RC802-30B(-BL)-S3
	RC801-30B-FV35-S3
RC804-30B(-BL)-S1	RC806-30B(-BL)-S1
	RC805-30B-FV35-S1
RC804-30B(-BL)-S2	RC806-30B(-BL)-S2
	RC805-30B-FV35-S2



Chapter 2. Product Specifications

2.1 E1 Interface Specification

Bit rate:	2048Kbps \pm 50ppm
Line code:	HDB3
Impedance of interface:	75 Ω (unbalanced) or 120 Ω (balanced)
Electrical characteristics:	complies with ITU-T G.703
Transfer characteristics:	complies with ITU-T G.823, G.724
Input jitter tolerance:	complies with ITU-T G.823, G.724

2.2 Optical Fiber Interface Specification

Bit rate:	100Mbps
Line code:	4B5B
Fiber connector:	SC (FC available for some types)
Optical Transmission of single strand fiber:	
Transmit power:	\geq -15 dBm
Receiving sensitivity:	\leq -31 dBm
Transmit Wavelength:	1310/1550nm
Distance:	>25km
Optical Transmission of dual-strand fiber:	
Transmit power:	\geq -5 dBm
Receiving sensitivity:	\leq -35 dBm
Transmit Wavelength:	1310nm
Distance:	>40km

2.3 Power Supply

Power supply:	DC -48	tolerance range -36V ~ -72V
	AC 220V	tolerance range 165V~265V
Power consumption:	\leq 5W	

2.4 Ambience

Working temperature:	0 ~ 45 $^{\circ}$ C
Humidity:	\leq 90% (25 $^{\circ}$ C non-condensing)

Chapter 3. Definition of Indicators

3.1 Description of the Front Panel

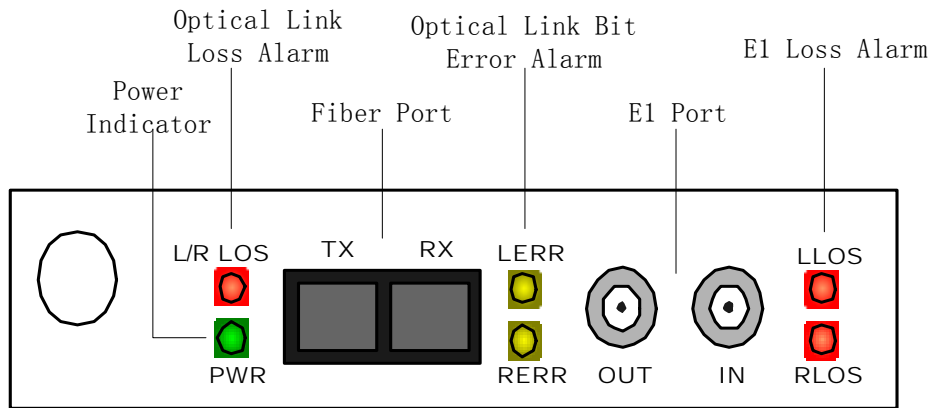


Figure 1. The front panel of RC802/804/806-30B module

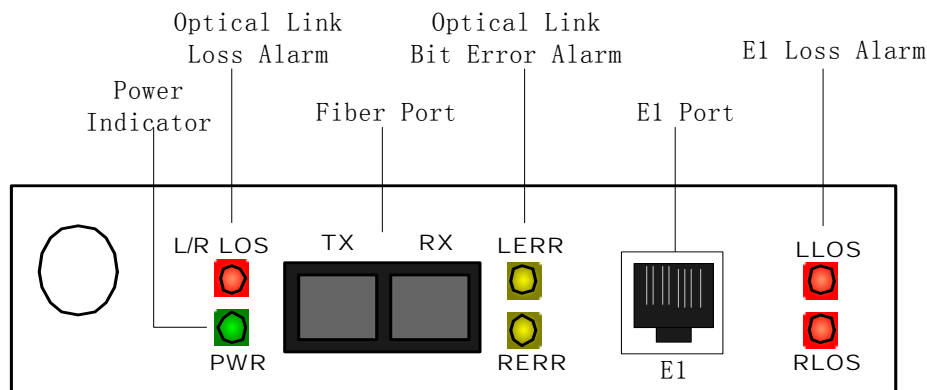


Figure 2. The front panel of RC802/804/806-30B-BL module

3.1.1 Power Supply Indicator

PWR power supply indicator (green): Steady on, built-in power works in good condition.

3.1.2 Alarm Indicators

- Loss of signal in E1 channel:
 - LLOS local signal loss alarm in E1 channel (red): ON when the receiving signal loss occurs at the local site.
 - RLOS remote signal loss alarm in E1 channel (red): ON when the receiving signal loss occurs at the remote site.
- Alarm of optical port:
 - L/R LOS receiving signal loss alarm in optical link (red): ON when the receiving signal loss occurs at the local site; Flashing, when the receiving signal loss occurs at the remote site.



LERR receiving signal error alarm in optical link (yellow): ON when LOF (loss of frame alignment) occurs or the receiving BER exceeds 10^{-3} level at local site.

RERR receiving signal error alarm in optical link (yellow): ON when LOF (loss of frame alignment) occurs or the receiving BER exceeds 10^{-3} level at remote site.

3.1.3 E1 Interface

RC802/804/806-30B series modules provide two CC3 connectors for single E1 channel interface; RC802/804/806-30B-BL series modules provide one RJ45 interface. Please refer to Appendix A for connection details.

- The factory default setup for CC3 connector is $75\ \Omega$ unbalanced signal transmission. OUT is signal output; IN is signal input.
- The factory default setup for RJ45 interface is $120\ \Omega$ balanced signal transmission. Pin 1, 2 are signal output; Pin 5, 6 are signal input.

3.1.4 Optical Interface

- For dual-strand fiber, the optical connector is DSC/PC. TX means transmitting, RX means receiving.
- For single strand fiber, the optical connector is SC/PC.

3.2 Dip-switch Setup


3.2.1 Dip-switch SW2 Setup

Please use small flat-blade screwdriver or other sharp end tools to set up the dip-switch.

- 1st bit: E1 link loop-back setup

1st	Loop-back setup
OFF	No loop-back
ON	Bi-directional loop-back

The factory default setup is 'OFF'.

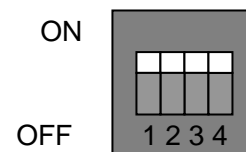


- 2nd: E1 link loop-back location setup


2nd	Loop-back setup
OFF	Remote loop-back
ON	Local loop-back

The factory default setup is 'OFF'.

Note that the 2nd bit is only effective when the 1st bit is switched to ON.

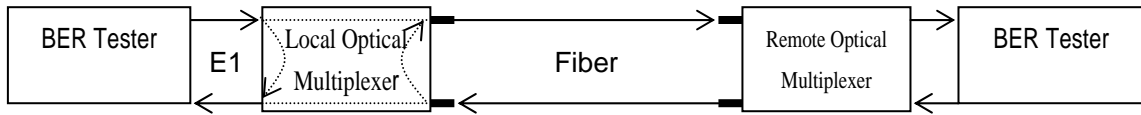

If “local loop-back” is set up on local optical multiplexer, the local optical multiplexer will generate internal-loop and external-loop simultaneously.

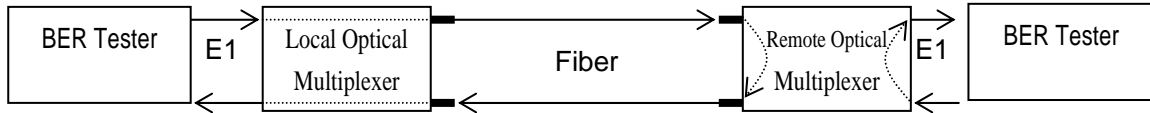

If “remote loop-back” is set up on local optical multiplexer, the remote optical multiplexer will generate internal-loop and external-loop simultaneously.

● 3rd bit: Fault-Pass-Through (FPT) function setup

When FPT is disabled, it is identical to the AIS function of traditional optical multiplexers. When the receiving signals of the E1 interface at the remote site are lost, the CORRESPONDING local E1 interface will output all “1” signals; when the receiving signals of the local optical interface are lost, ALL local E1 interfaces will output all “1” signals.

FPT is designed for users who have special requirements. When FPT is enabled, if there is alarm of LOS on any direction of optical interface, E1 interfaces on both sides will not output HDB3 code. In this case, there will be LOS alarm, rather than AIS alarm, on downstream E1 terminal devices (e.g. Switches, converters or SDH devices).

3rd bit	FPT switch
OFF	Disable (identical to the AIS function of traditional optical multiplexers)
ON	Enable

The factory default setup is OFF

● 4th bit: Setup for forced monitor and management by the remote optical multiplexer

When optical multiplexers are working in pairs, if the module is plugged into RC001-1 single slot chassis deployed at customer premise, the module will be automatically set up to be managed by the host-site multiplexer; if it is plugged into RC002-16 16-slot chassis, to be managed by the remote multiplexer, the module need to be manually set up to that working mode.


4th bit	Remote management setup
OFF	Auto-sensing management setup
ON	Forced management by the remote-site multiplexer



3.2.2 E1 Interface Impedance Setup (SW1)

Please use a small flat-blade screwdriver or other sharp end tools to set up the dip-switch.

Each group of dip-switch is corresponding to its respective E1 interface.

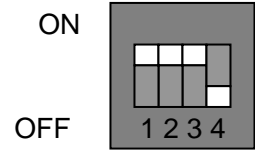

The dip-switch definition is as follows:

1st	2nd	3rd	4th
ON	ON	ON	OFF
Effective for 75 Ω unbalanced signals			

or

1st	2nd	3rd	4th
OFF	OFF	OFF	ON
Effective for 120 Ω balanced signal			

The factory default setup of RC802/804/806-30B series is “Effective for 75 Ω unbalanced signal”.
 The factory default setup of RC802/804/806-30B-BL series is “Effective for 120 Ω balanced signal”.

3.2.3 Factory Default setup (SW3)

SW3 is a group of 2-bit dip-switch. It is set up by the factory and is not allowed to be changed by end-users.



Chapter 4. Installation and Test

4.1 Inspecting the Product

Before installation, please first check the models and quantities of optical multiplexers and accessories with the packing list. Also, please check whether the equipment is in perfect condition. Occasionally, drying process may be needed if the equipment is affected with damp environment.

4.2 Preparation Before Installation

The following steps are required before installing the optical multiplexers:

- ◆ Please read the user manual carefully.
- ◆ Prepare all the wires and cables that are needed. Make sure there is no reverse connection, disconnection or short circuit connection. Refer to Appendix A for details of cable making.
- ◆ Make sure that the voltage of the power supply is within the tolerance range and the chassis is grounded with the earth.
- ◆ Prepare the bit-error-rate tester and optical power test-meter for the test of link quality.
- ◆ If using 120 Ω balanced signal interface, please change the dip-switch setup on the bottom of the optical multiplexer.
- ◆ Fix the optical multiplexer into RC001-16 (19-inch 3U chassis). Pay attention to the ambience requirement.

4.3 Installation

4.3.1 Connecting Data Interfaces

- E1 interface

It is suggested to use SYV 75-2-2 coaxial cable for CC3 connector, and use twisted pairs for RJ45 connector.

- Optical interface

Insert the SC fiber tail into the optical interface (push hard until to the end). If you are not sure about transmission direction, it's advised to connect the fiber cable after applying the power supply.

4.3.2 Applying Power Supply

Insert the module into the chassis and fix it with the screw at the bottom of the module.

If the power supply is DC -48V, please ground the PGND with the earth first, then “-48V” pin with the lower voltage cable, “0V” pin with higher voltage cable before applying the power supply. Make sure it is firmly fixed, and there's no reverse connection and no short circuit before applying



the power supply.

If the power supply is AC 220V, please use the power cable in the accessories provided by the factory.

After applying the power supply, the PWR indicator shall be steadily ON.

4.3.3 Configuration with Buttons and Dip-switches

After applying the power supply of the optical multiplexers, first ensure there's no alarm at optical ports. If optical ports are connected properly, there shall be no LOS, LOF or ERR alarm. The ERR (yellow) may be ON within a short period after the power supply is just applied. This is because applying the power supply will cause jitters, and result in a few bit errors. After 10 seconds, ERR will be off and this indicator refreshes test every 10 seconds.

- Testing bit error rate

The bit error rate can be tested by 2M bit-error-rate tester, and the testing can be implemented by setting up loop-back control switch (the 1st and 2nd bits of dip-switch SW2) on the front panel.

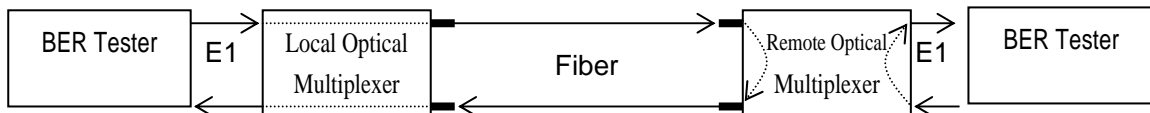


Figure 4: Set up "remote loop-back" on local optical multiplexer

- Fault-Pass-Through function (optional)

This function can be set up with the dip-switch on the front panel, please refer to Chapter 3 for details.

When Fault-Pass-Through function is enabled, as long as signal loss occurs at the optical port, all E1 signal output at the local and remote site will be terminated; when Fault-Pass-Through function is disabled, if the optical signal at the local site loses, the E1 interface of the local equipment will output AIS signals.

It is suggested that this function only be applied for users who have special requirements.



Chapter 5. Troubleshooting

If there is any problem during installation and operation, please try the following solutions. If the problems still cannot be solved, please contact distributors for technical support.

The following explanations and solutions for optical port alarms and E1 LOS alarms are used to handle local alarm problems. For remote-end alarms, please handle them at the remote site.

- **Green PWR indicator is not on**

Answer: Power supply fails. Check whether the power supply is working properly, and make sure the power cable for -48V DC is not reversely connected.

- **Red LOS indicator of optical port is on**

Answer: Loss of receive signals occurs at the optical port. Please check whether the input fiber (RX) is connected properly and ensure it is not reversely connected. And check the receiving optical power with optical power test-meter, which shall be bigger than the index of receiving sensitivity.

- **Yellow ERR indicator of optical port is on**

Answer: The loss of frame alignment occurs, or the bit error rate of optical RX signal is greater than 10^{-6} or 10^{-3} . Usually ERR alarm occurs right after applying the power supply, but after 10 seconds the ERR indicator shall be off. However, if ERR alarm occurs during operation, please check whether optical RX port connects properly, and test the RX optical power.

- **Red LOS indicator of E1 sub-channel is on**

Answer: If loss of RX signal alarm in E1 sub-channel occurs, no HDB3 code signal will be received. Please check whether all E1 ports are connected properly, and whether 75 Ω cable is reversely connected, or whether the wire sequence of 120 Ω cable is in right order. If LOS alarm occurs in the unused E1 sub-channel, press “mask” button to “on” to mask the alarm after finishing the configuration of device.



Appendix A. Introduction of Cable Making

E1 Cable Making

RC800-30B series E1 cable

◆ 75 Ω unbalanced signal port adopts CC3 connector:

It is suggested to use SYV 75-2-2 coaxial cable, and the maximum distance is 200 meters.

1. First pick out the CC3 connector from the accessories, and unscrew the tail jacket.
2. Split the core of the coaxial cable from the metal shield, and put the jacket on to the cable.
3. Weld the core of the coaxial cable firmly with the CC3 connector pin.
4. Weld the metal shield of the coaxial cable firmly with the shield of CC3 connector.
5. Screw the jacket tightly on to the tail of CC3 connector.

◆ 120 Ω balanced signal port also adopts CC3 connector:

It is suggested to use unshielded twisted pair (UTP) wire.

CC3 connector: OUT core ——— OUT+ signal output+

CC3 connector: OUT shell ——— OUT- signal output-

CC3 connector: IN core ——— IN+ signal input+

CC3 connector: IN shell ——— IN- signal input-

◆ RJ45 cable making:

The RJ45 interface is set to use 120 Ω balanced signals. The sequence of the cable is as follows:

Pin number	1	2	3	4	5	6	7	8
Definition	Output+	Output-			Input+	Input-		

If users set the RJ45 interface to use 75 Ω unbalanced signals. The sequence of the cable is as follows:

Pin number	1	2	3	4	5	6	7	8
Definition	Output	Ground			Input	Ground		