



**RCMS2504-120 Series  
Standalone, Fiber Optic  
Ethernet Multiplexer**

**User Manual (REV.A)**

**Raisecom Technology Co., Ltd.**

**(04/2005)**

## 1. Cautions



Please read the following notices carefully before installing and using the device, Raisecom does not respond to any loss that caused by violating safety notice.



RCMS2504-120 provides two types of power supply: AC and DC. When using DC power supply, please plug the power supply connectors according to this manual strictly and avoid contrary connecting.



RCMS2504-120 is integrated device that has precise elements, please avoid violent shakes and impacts, and do not disassemble or maintain the device yourself. If it is required, please do it under the guide of our technical staff following in the steps of anti static. Please contact us if there is any need.



There must be grounding protection for the sake of safety; do not disassemble the device yourself, we regard it as you waiver your rights of repair guarantee.

## Contents

1.	Cautions .....	1
2.	Overview .....	3
2.1.	Introduction .....	3
2.2.	Main Feature.....	3
2.3.	Number Introduction .....	3
2.4.	Dimension .....	4
3.	Parameters.....	5
3.1.	E1 interface technical indicator .....	5
3.2.	E1 Ethernet interface technical features .....	5
3.3.	Optical interface technical indicator .....	5
3.4.	Auxiliary data channel.....	5
3.5.	Power supply .....	5
3.6.	Ambience .....	6
4.	How to use .....	7
4.1.	Introduction of front panel .....	7
4.1.1.	Power indicator .....	7
4.1.2.	Alarm indicator .....	7
4.1.3.	Switch configuration of front panel: default setting is OFF .....	7
4.1.4.	Function Button: buttons of default settings are all pressed out.....	10
4.1.5.	NM (network management) Interface.....	10
4.2.	Introduction of back panel.....	11
4.2.1.	Power Interface and Switch .....	11
4.2.2.	Auxiliary Data Channel .....	11
4.2.3.	Ethernet interface .....	11
4.2.4.	E1 interface.....	11
4.2.5.	Optical Interface.....	11
4.3.	DIP-Switch of device on bottom .....	12
5.	Installation and test .....	13
5.1.	Installation.....	13
5.2.	Reparation before installation .....	13
5.3.	Installation Process.....	13
5.3.1.	Method of cable connection .....	13
5.3.2.	Electrify.....	14
5.3.3.	Button usages and switch configurations.....	14
6.	Troubleshooting .....	15
7.	Appendix A Introduction of making cable .....	16
A.1	E1 interface.....	16
A.2	Cable of Ethernet.....	16
A.3	RS232 cable of data channel.....	16
A.4	LINK UP cable of NM interface .....	17

## 2. Overview

### 2.1. Introduction


Ethernet multiplexer (RCMS2504-120) is an ideal transmission device of optical fiber for point to point networks, middle and small capacity networks, such as wireless communication base stations, private communication networks and switch networks. The RCMS2504-120B provides 4 E1 links and 4 Ethernet ports Ethernet, and can support remote management. This kind of equipment can work either with RCMS2304-120 or RCMS2404-240.

### 2.2. Main Feature

- Provide 4 E1links, 4 Ethernet ports and one single strand fiber port
- Implement Fast Ethernet + E1 multi service access
- Auto-adaptive Ethernet port sharing 100M rate bandwidth in fiber
- Ethernet ports communication, or insulation at local end, or communication between local end and relevant remote end.
- Control and manage access and bandwidth of customer.
- Provide E1 branch loop-back for opening and maintaining system.
- Alarm of local and remote can be shown at same time.
- Support SNMP management solution. If communicate with RCMS2304-120, native equipment (RCMS2504-120) will be managed by NM server, which connecting with NM port of RCMS2304-120. If communicate with RCMS2404-240, native equipment will be managed by RC004-16 chassis. Native equipment can support NM through working with all RC series products
- Adopt super scale ASIC chip, low power consumption, 4 layers PCB, and high dependability.
- Selectable voltage: AC: 200V and DC: -48V. Built-in power supply
- Power consumption  $\leq 15W$

### 2.3. Number Introduction

Number Illustration:

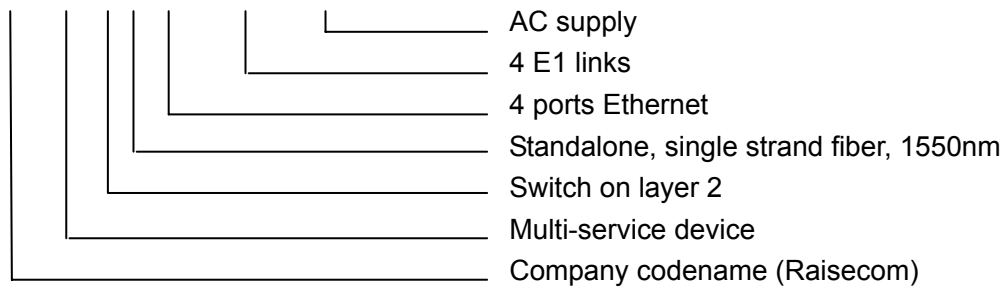RC MS 2 5 04 – 120 / AC

**Note:** Standalone single strand fiber Ethernet multiplexer: RCMS2504-120 should work with RCMS2304-120, viz. one RCMS2504-120 should connect with one RCMS2304-120.

## 2.4. Dimension

- Dimension: 320mm(W)×38mm×(H)×160mm(D)

## 3. Parameters

### 3.1. E1 interface technical indicator

Bit rate :	2048Kbps±50ppm
Line code :	HDB3
Impedance of interface :	75Ω ( unbalanced BNC interface ) or 120Ω (balanced RJ-45 interface)
Electrical characteristics:	Comply with ITU-T G.703
Other characteristics:	Indicators, such as transfer characteristics and input jitter tolerance comply with ITU-T G.823, G.724 etc. relevant protocols

### 3.2. E1 Ethernet interface technical features

IEEE 802.3 Ethernet  
IEEE 802.3u Fast Ethernet  
IEEE 802.3q  
IEEE 802.3d Spanning Tree  
Support maximum frame length up to 1916 Bytes  
Work mode: 10/100M Auto-negotiation, Auto-MDI/MDIX and manual configuration  
Flow control: IEEE 802.3x and backpressure

### 3.3. Optical interface technical indicator

Bit rate :	155Mbps
Fiber connector :	SC
Optical transmission :	
There are two kinds of single mode single strand fiber product: S1: 0-25KM, S2: 10-50KM	

### 3.4. Auxiliary data channel

RS232 standard

### 3.5. Power supply

Power Supply: DC: -48V Voltage: -36V ~ -72V  
AC: 220V Voltage: 165~265V  
Power consumption: ≤25W (under full load condition)


### **3.6. Ambience**

Temperature: 0 ~ 45

Relative Humidity: ≤90% ( 25 )

## 4. How to use

### 4.1. Introduction of front panel

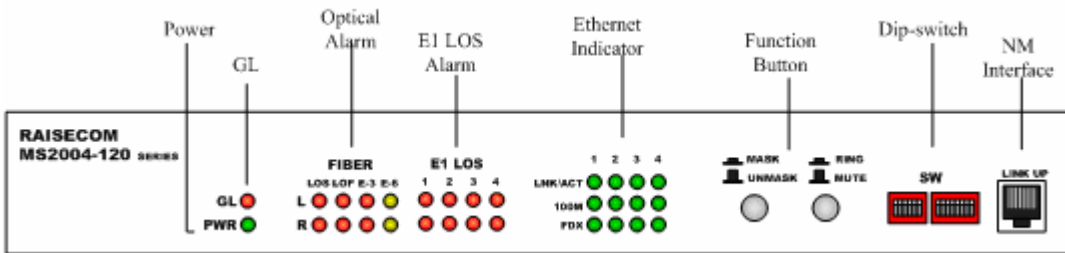

RCMS2504-120 front panel

#### 4.1.1. Power indicator

Power indicator ( Green ) : If power is in good condition, it is ON

#### 4.1.2. Alarm indicator

- GL: general alarm  
GL general alarm indicator (red): If a certain alarm occurs at local end, GL indicator is ON.  
If a certain alarm occurs at remote end, GL indicator is flashing.
- Optical interface alarm (include local and remote end: L: local end, R: remote end)  
LOS (red): If lose receiving optical signal, alarm is ON.  
LOF (red): If lose receiving optical frame, alarm is ON.  
E-3 (red): If optical receiving signal bit error exceeds  $10^{-3}$ , alarm is ON.  
E-6 (yellow): If optical receiving signal bit error exceeds  $10^{-6}$ , alarm is ON.
- E1 loss: (include local and remote end: L: local end, R: remote end)  
LOS1~4 (red): If E1 branch lose receiving signal, alarm of relevant branch is ON
- Ethernet indicator: (4 links indicator correspond to 4 Ethernet ports)  
LNK/ACT (green): If connection is normal, alarm is ON. If receive or transmit data, alarm is flashing.  
100M (green): 100Mbps: ON, 10Mbps, OFF  
FDX/COL (green): alarm is ON under full duplex mode and OFF under half duplex mode

#### 4.1.3. Switch configuration of front panel: default setting is OFF





The purpose of switch is for E1 remote loop-back test, fault transfer, Ethernet packet length configuration, duplex configuration, insulation function configuration of Ethernet ports, selection between 232 and 485 of NM ports, selection between local and remote NM.

6 bits DIP-switches on left side:

- 1<sup>st</sup> bit: enable/disable loop-back

1 <sup>st</sup>	Loop-back
OFF	Disable
ON	Enable

- 2<sup>nd</sup> ~4<sup>th</sup> bit: loop-back selection at remote end

2 <sup>nd</sup>	3 <sup>rd</sup>	4 <sup>th</sup>	Loop-back
OFF	OFF	OFF	1 <sup>st</sup> E1
OFF	OFF	ON	2 <sup>nd</sup> E1
OFF	ON	OFF	3 <sup>rd</sup> E1
OFF	ON	ON	4 <sup>th</sup> E1

**Note:** Loop-back selection only can configure one test method: single E1 channel loop-back. When enable loopback function, loopback selection is valid if there is no any alarm. If single E1 channel loop-back is testing, the other branches are working without any disturbance.

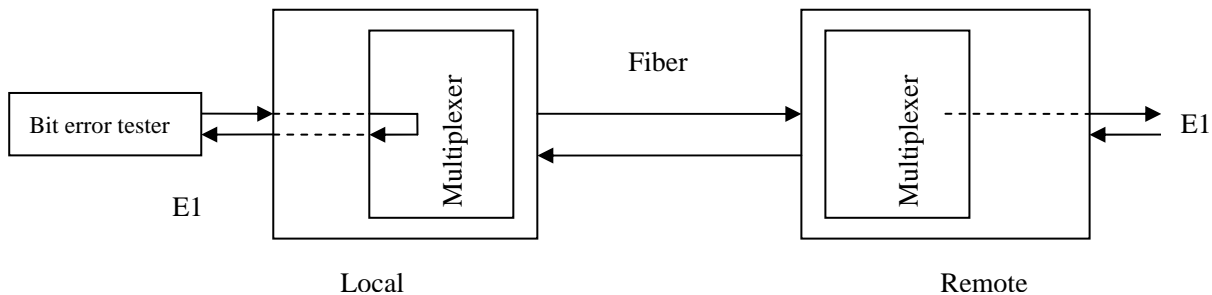


Figure: sketch map of setting local loop-back at local end

**Note :** When set loop-back at local end, DIP-switches (1<sup>st</sup> ~4<sup>th</sup>) of Ethernet multiplex at remote end should be default state 'OFF'.

- 5<sup>th</sup> bit : Enable or disable fault transfer function

If disable fault transfer function, it complies with AIS function of traditional multiplexer. If E1 receiving signals on remote end are loss ,the E1 outputs of local end are all '1' ;while if optical signals of local end are loss , all E1 outputs are all '1' at local end.

Fault transfer function is designed for user having special demands. If occur signal loss on any direction of optical interface after enabling fault transfer function ,E1 interface on both side do not output HDB3 code. Signal loss will occur at E1downterminal equipment, but not AIS alarm.

5 <sup>th</sup> bit	Fault transfer function switch
OFF	Disable ( comply with AIS of traditional multiplexer )

ON	Enable
----	--------

- 6<sup>th</sup> bit: setting for Ethernet data frame length

6 <sup>th</sup> bit	Ethernet data frame length setting
ON	1916 byte
OFF	1536 byte

8 bit DIP-Switches on right side:

- If auto-negotiation on from 1<sup>st</sup> through 4<sup>th</sup> Ethernet port, set duplex mode.

**Note:** supports 10/100Mbps auto-adaptive Ethernet port and full/half duplex auto-negotiation.

Auto-negotiation fail: set duplex mode of port referring to the 4bits switches

Auto-negotiation success: working on full duplex mode foreign to 4 bits switches setting.

Definition

1 <sup>st</sup>		2 <sup>nd</sup>		3 <sup>rd</sup>		4 <sup>th</sup>	
OFF	Full duplex	OFF	Full duplex	OFF	Full duplex	OFF	Full duplex
ON	Half duplex	ON	Half duplex	ON	Half duplex	ON	Half duplex

- The 5<sup>th</sup> and 6<sup>th</sup> bit of Ethernet port: enable or disable insulation function of Ethernet port

5 <sup>th</sup>	6 <sup>th</sup>	Definition
OFF	OFF	1~4 can communicate each other, default setting
OFF	ON	1~4 Ethernet port isolated on local end
ON	OFF	1~4 port isolated oppositely both on two sides (with TAG)
ON	ON	1~4 port isolated oppositely both on two sides (without TAG)

‘**Communicate**’ means all users at 4 Ethernet ports of local end can communicate either each other or with users at remote end.

“**Isolated on local end**” means users, at 4 Ethernet ports of local end, isolate each other; but can communicate with users at remote end.

“**isolated oppositely on two sides**” means the 1<sup>st</sup> port of local end can communicate with the 1<sup>st</sup> port of remote end, the 2<sup>nd</sup> port of local end can communicate with the 2<sup>nd</sup> port of remote end, the 3<sup>rd</sup> port of local end can communicate with the 3<sup>rd</sup> port of remote end and the 4<sup>th</sup> port of local end can communicate with the 4<sup>th</sup> port of remote end. Whether add TAG target or not as per users’ requirement. **If enable this function, require to configure both ends to “isolated oppositely on two sides” simultaneously.**

- 7<sup>th</sup> bit: NM control RS232/485 selectable switch

7 <sup>th</sup>	NM control selection
OFF	RS232 control
ON	RS485 control


If connect NM port of connection device LINKUP with computer serial port, whether use

RS232 standard or RS485 standard as per the standard of computer serial port!!! Otherwise, computer serial port cannot communicate with this equipment.

- 8<sup>th</sup> bit: enable/disable of remote management

8bit	Remote management
OFF	Disable
ON	Enable

**NOTE:** If use NM function, should configure this bit switch before opening equipment. Ethernet multiplexer, connecting with computer serial port by LINK UP interface (we call local end as Ethernet multiplexer), should be configured to 'valid local end control', otherwise, should be configured to 'valid remote control' for remote end. Therefore, two Ethernet multiplexers can be controlled on both ends simultaneously. NM topology are illustrated as following,

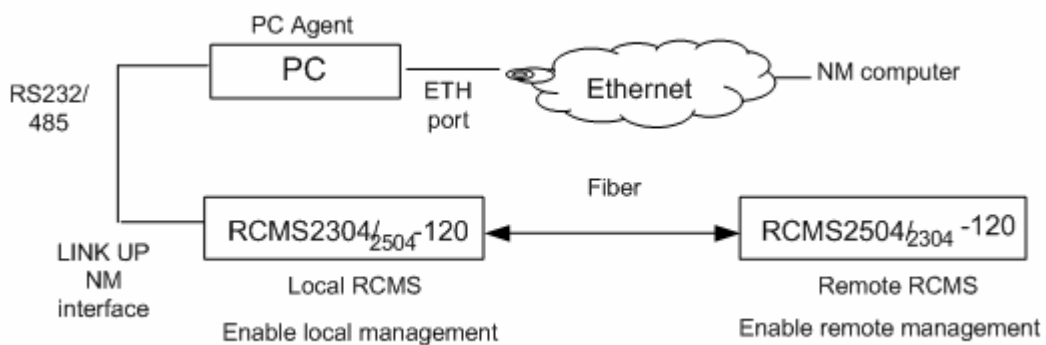

**NOTE:** could install PC Agent software on NM computer as per users' requirement. Management information to Ethernet multiplexers at remote end is transmitted through the overhead of optical signal. It will not take use of bandwidth of each port, the method of which is out-of-band management.

#### 4.1.4. Function Button: buttons of default settings are all pressed out.

- MASK/UNMSAK shield pseudo alarm button  
Press it in, shield unused E1 branch indicator (pseudo alarm)  
Press it out, do not shield E1 branch indicator
- RING/MUTE button  
If press buttons in, alarm indicators are ON and alarm are set off.  
If press buttons out, alarm is mute

#### 4.1.5. NM (network management) Interface

Connect NM interface 'LINK UP' with computer serial port. Could select interface mode between RS232 and RS485.

- 'LINK UP' uplink interface: RJ45 with RS232 or RS485 standard (bit rate: 19.2Kbps). Line order refers to appendix A.

## 4.2. Introduction of back panel



Figure: back panel of RCMS2504-120

### 4.2.1. Power Interface and Switch

- AC supply: adopt standard three-phase electric socket with 220V
- DC supply: adopt power interface with  $-48V$ . Connect left interface with  $-48V$ , right with  $0V$ , and middle with protection GND
- Switch can control power supply.

### 4.2.2. Auxiliary Data Channel

RS232 interface: adopt RJ45. Line order refers to appendix A

### 4.2.3. Ethernet interface

- Connect each RJ45 with relevant one Ethernet link. Line order refers to appendix A.
- Each port is 10/100Mbps auto-adaptive.
- Possess auto-learning cross line function. Support parallel line or cross line to connect with Ethernet equipment.

### 4.2.4. E1 interface

A DB37 male connector on the back panel provides 1<sup>st</sup>~4<sup>th</sup> E1 branch ports. The instruction of line connection refers to appendix A.

- If adapt  $75\Omega$  connection mode, require to connect DB37 with eight adaptors of CC3 coaxial interfaces which type is CC4B-8G. After connection, there are 4 E1 branches from left to right, where the above row is signal output 'OUT' and bottom row is signal input 'IN'.
- Do not require adapter for using  $120\Omega$  connection mode.


### 4.2.5. Optical Interface

Single strand fiber and SC/PC optical interface

### 4.3. DIP-Switch of device on bottom

There are two 8-bit switches, each of which is corresponding to 2 E1 branch links configuration nearby the E1 interface at the bottom of equipment

The dip-switch can be set by using small sharp pen or tools. Each set of dip-switch is in correspondence with E1 port.

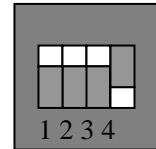

Definition as following :

1 <sup>st</sup>	2 <sup>nd</sup>	3 <sup>rd</sup>	4 <sup>th</sup>
ON	ON	ON	OFF
75Ω unbalanced signals are valid			
5 <sup>th</sup>	6 <sup>th</sup>	7 <sup>th</sup>	8 <sup>th</sup>
ON	ON	ON	OFF
75Ω unbalanced signals are valid			

Or

1 <sup>st</sup>	2 <sup>nd</sup>	3 <sup>rd</sup>	4 <sup>th</sup>
OFF	OFF	OFF	ON
120Ω balanced signals are valid			
5 <sup>th</sup>	6 <sup>th</sup>	7 <sup>th</sup>	8 <sup>th</sup>
OFF	OFF	OFF	ON
120Ω balanced signals are valid			

Or

As shown in above figure, the default status is set as '75Ω unbalanced signal BNC interface are valid'.

**Note: Suggest using adapter for 75Ω unbalanced signal and using DB37 connection for 120Ω balanced signal.**

## 5. Installation and test

### 5.1. Installation

According to equipment list, check types and amount of equipment and their fittings. Check the appearance of equipment whether are damaged or not. If it is affected with damp, should dry it before use.

### 5.2. Reparation before installation

- Carefully read this user manual
- Prepare all kinds of cable, which will be used. Assure no short or open circuit. The method of making cable refers to appendix A.
- Assure that voltage is within work condition.
- Prepare bit error tester and optical power meter used for testing cable quality.
- If use 120Ω balanced signal interface, please modify the switch setting at the bottom of equipment.
- Lay the equipment on steady and safe place and note environment demands.

### 5.3. Installation Process

#### 5.3.1. Method of cable connection

- E1 interface  
Suggest connecting coaxial adapter with SYV 75-2-2 coaxial cable, or connecting DB37 interface with twisted pair.
- Ethernet interface  
Use CAT5 straight or cross over twisted pair
- Optical interface  
Plug SC patch fiber into optical interface (push hard until to end). If not sure about transmission direction, please plug the fiber before turning on the power of device
- Auxiliary data channel  
If need to use auxiliary data channel, connect it with RS232 cable. Please avoid plugging hot swap.
- NM (network management) function  
Connect LINK UP interface with PC serial port under the condition of turning off electricity.
- Switch setting of front panel  
Configure switches of front panel as per user requirements under the condition of turning off electricity. Please do not modify other switches except for loopback test switch after turning

on electricity.

### 5.3.2. Electrify

Implement above operations before turning on electricity.

If supply power with DC -48V, please connect 'GND' terminal with protection GND, 'OV' terminal with high potential cable, and -48V terminal with low potential cable. Make sure you follow above statement, and assure firm installation and no open circuit.

If supply power with AC 220V, please use power cord.

Power indicator 'PWR' is ON after turning on electricity

### 5.3.3. Button usages and switch configurations

Assure there are no alarms for optical interface after turning on electricity. If correctly connect optical interface, alarm of LOS LOF and E-3 will not occur. E-6 might be yellow after first turning on electricity. Because ultrashort jitter of electricity will cause slight bit errors.

- Test bit error

Use 2M Tester to test every E1 error bit level tested through tying in loopback control switch of front panel (please refer to chapter two).

- Shield unused E1 alarm

If there is no any alarm in connected E1 links, but still have unused E1 branches, LOS alarm indicator of unused E1 links called as 'unused E1 alarm' is ON. Press MASK button in to clear all the unused E1 alarm and all the LOS alarm indicator of E1 tributaries are OFF.

If disconnection occurs in linked E1 branch, the LOS indicator of this branch will be still on after shielding unused E1 alarm.

If recover power supply after turning off it, the shield function is disabled. Should press button out and then press it in again.

- Set off or mute alarm

Press RING/MUTE button in to set off alarm. Meanwhile, if any alarm indicator is ON, alarm will make a harsh sound.

## 6. Troubleshooting

If you have any problems during installation and usage, try to solve them by the following proposals. If there is no solution, please contact with distributors for technical support.

These following explanations and solutions of alarm for optical port and LOS alarm of E1 branch aim at alarm of local end. Please handle it at remote end if alarm occurs at remote end.

- Green PWR indicator is OFF  
Answer: power supply faults. Please check whether power is properly supplied and -48V power cord does not be connected reversely.
  
- GL (red) is ON  
Answer: If alarm occurs at local end (L row), GL is continually ON. If alarm occurs at remote end (R row) GL is flashing.  
There are three methods to handle it shown as following,
  1. If there is some other red or yellow alarm indicators, except for GL, please resolve corresponding alarm at first.
  2. If no alarm occurs in L row except that GL is still ON at local end, there is HDB3 code error during receiving signals at E1 link of local end equipment. The reason might be that E1 cable is too long, too much interference, signal attenuation is over -6dB or poor contact of tie-in.
  3. If no alarm occurs in L row except that GL is still ON at remote end, there is HDB3 code error during receiving signals at E1 link of remote end equipment.
  
- Red LOS indicator of optical port is ON  
Answer: Loss of reception signal occurs at optical port. Please check whether input of fiber is connected correctly. Use optical power meter to detect optical power, which should be larger than reception sensitivity.
  
- Red LOF indicator of optical port is ON  
Answer: Loss of frame of reception signal occurs at optical port. In this case, optical signal has been received, but value of optical power is threshold or fiber is so short that reception side is in saturated status. Detect RX optical power and ensure that optical interface TX has been connected well at remote end.
  
- Red E-3 indicator of optical port is ON.  
Answer: The bit error of optical RX signal is over  $10^{-3}$ . Please check whether optical RX port has been connected well and detect reception optical power.
  
- Yellow E-6 indicator of optical port is ON  
Answer: The bit error of optical RX signal is over  $10^{-6}$ . If occur E-6 alarm during operation period, please check whether optical RX port has been connected well and detect reception optical power.
  
- Red LOS indicator of E1 channel is ON  
Answer: Loss of RX signal alarm at E1 channel. There is no HDB3 signal input. Please check whether E1 port has been connected well, 75  $\Omega$  cable has been connected reversely and 75  $\Omega$  cable order has been connected right.



## 7. Appendix A Introduction of making cable

### A.1 E1 interface


- 75ohm adopt DB37 external hanging coaxial adapter:  
Suggest using SYV 75-2-2 coaxial cable. The longest distance is less than 200 meters.  
Take CC3-K3 plug out fittings and screw off protecting sheath. Split the core and shielded layer of coaxial cable. Protecting sheath, iron collar and cannulation ( $\Phi 3$ ) cover onto cable. Firmly weld core and CC3-K3. Wrap CC3-K3 plug in protecting sheath of cable. Hold and press iron collar by press pincher. Wrap CC3-K3 and line in cannulation, which is contracted and fastened by heat. Fix protecting sheath.
- 120ohm DB37 male connector is defined as following:

DB37 pin definition	1 <sup>st</sup> Branch	2 <sup>nd</sup> Branch	3 <sup>rd</sup> Branch	4 <sup>th</sup> Branch
OUT	3、 4	7、 8	11、 12	15、 16
IN	21、 22	25、 26	29、 30	33、 34

Other pin: GND

### A.2 Cable of Ethernet

Use Cat 5 twisted pair to connect the equipment. Please note the twisted pair is less than 100 meters.

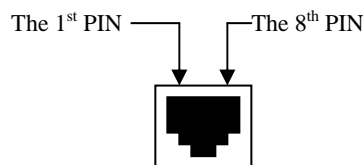

Can choose parallel or cross line.

RJ45 line order is as following:

Pin number	1	2	3	4	5	6	7	8
Definition	TX+	TX-	RX+	Not Used	Not Used	RX-	Not Used	Not Used

### A.3 RS232 cable of data channel

- Auxiliary data channel adopts RJ45 connector whose pins definition are as following:
  - 3 —RXD 232 signal input
  - 6 —TXD 232 signal output
  - 4、 5—GND

others — Unassigned

Line orders between RS232 (RJ45) and PC serial port (DB9 female connector) are as following:

RJ45		DB9F
3	←	3
6	→	2
4、5	—	5

## A.4 LINK UP cable of NM interface

Connect LINK UP interface with console interface

LINK UP interface adapts RJ45 whose pins definition are as following,

RS232 Part:

3 — RXD 232signal input  
 7 — TXD 232 signal output  
 4、8 — GND

RS485 Part,

1 — RXD+ 485 signal input  
 2 — RXD- 485 signal input  
 5 — TXD- 485 signal output  
 6 — TXD+ 485 signal output

**NOTE:** output and input of signal is as far as equipment itself.

# **BROADBAND to RAISECOM**

@2005 Raisecom Technology Co., Ltd.

All trademarks are the property of their respective owners.

Technical information may be subject to change without prior notification.